

ONE SOURCE. ONE SOLUTION.



**Lambton**

## Assembly Manual

GLA-LWPLAT-20X8  
Assembly Instructions

### Step-1

- Install the Primary Channels and Secondary Support Channels as shown below.
- Use 5/16" x 1 1/2" Bolt and Nuts

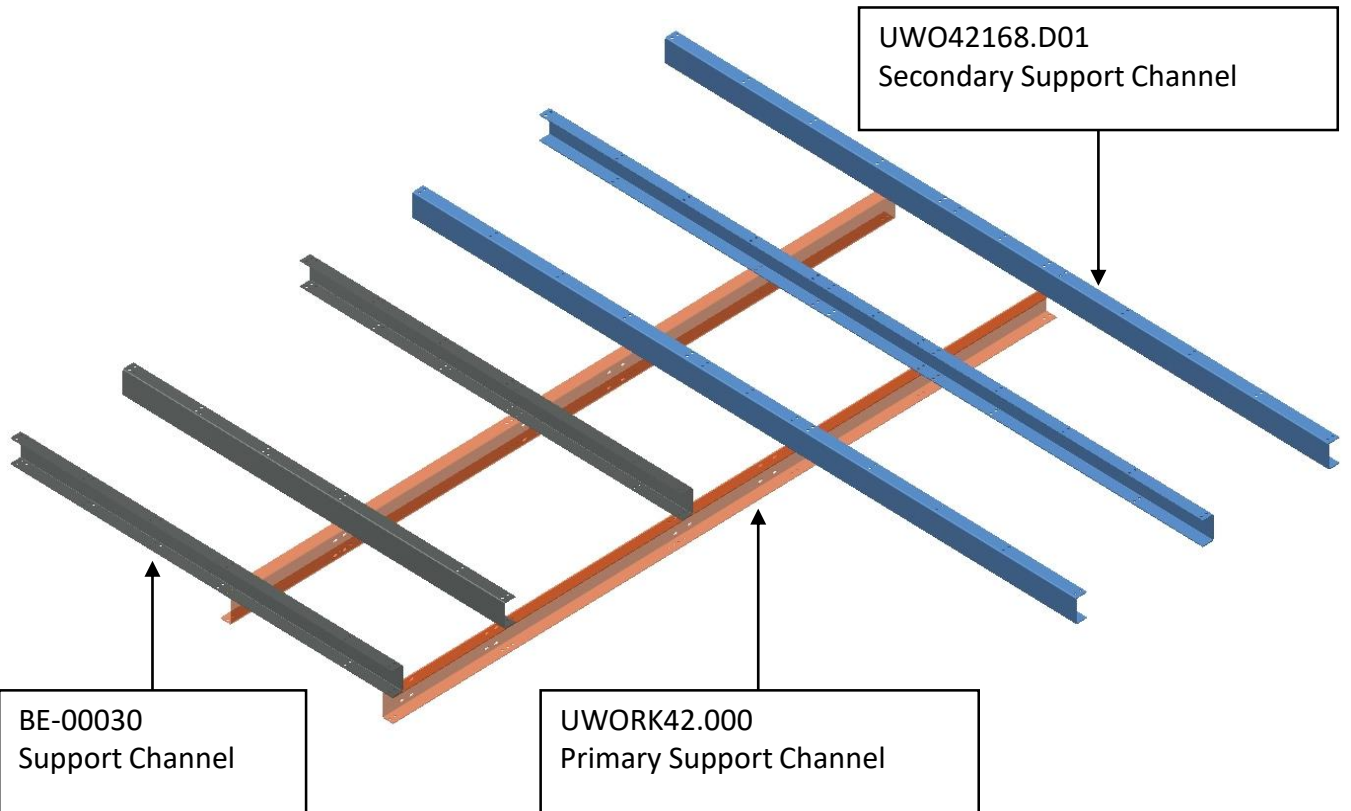


Fig. 1

## Step-2

- Assemble the toe boards as shown below, by bolting them on Secondary channels.
- Use 5/16" x 3/4" Bolt and Nuts

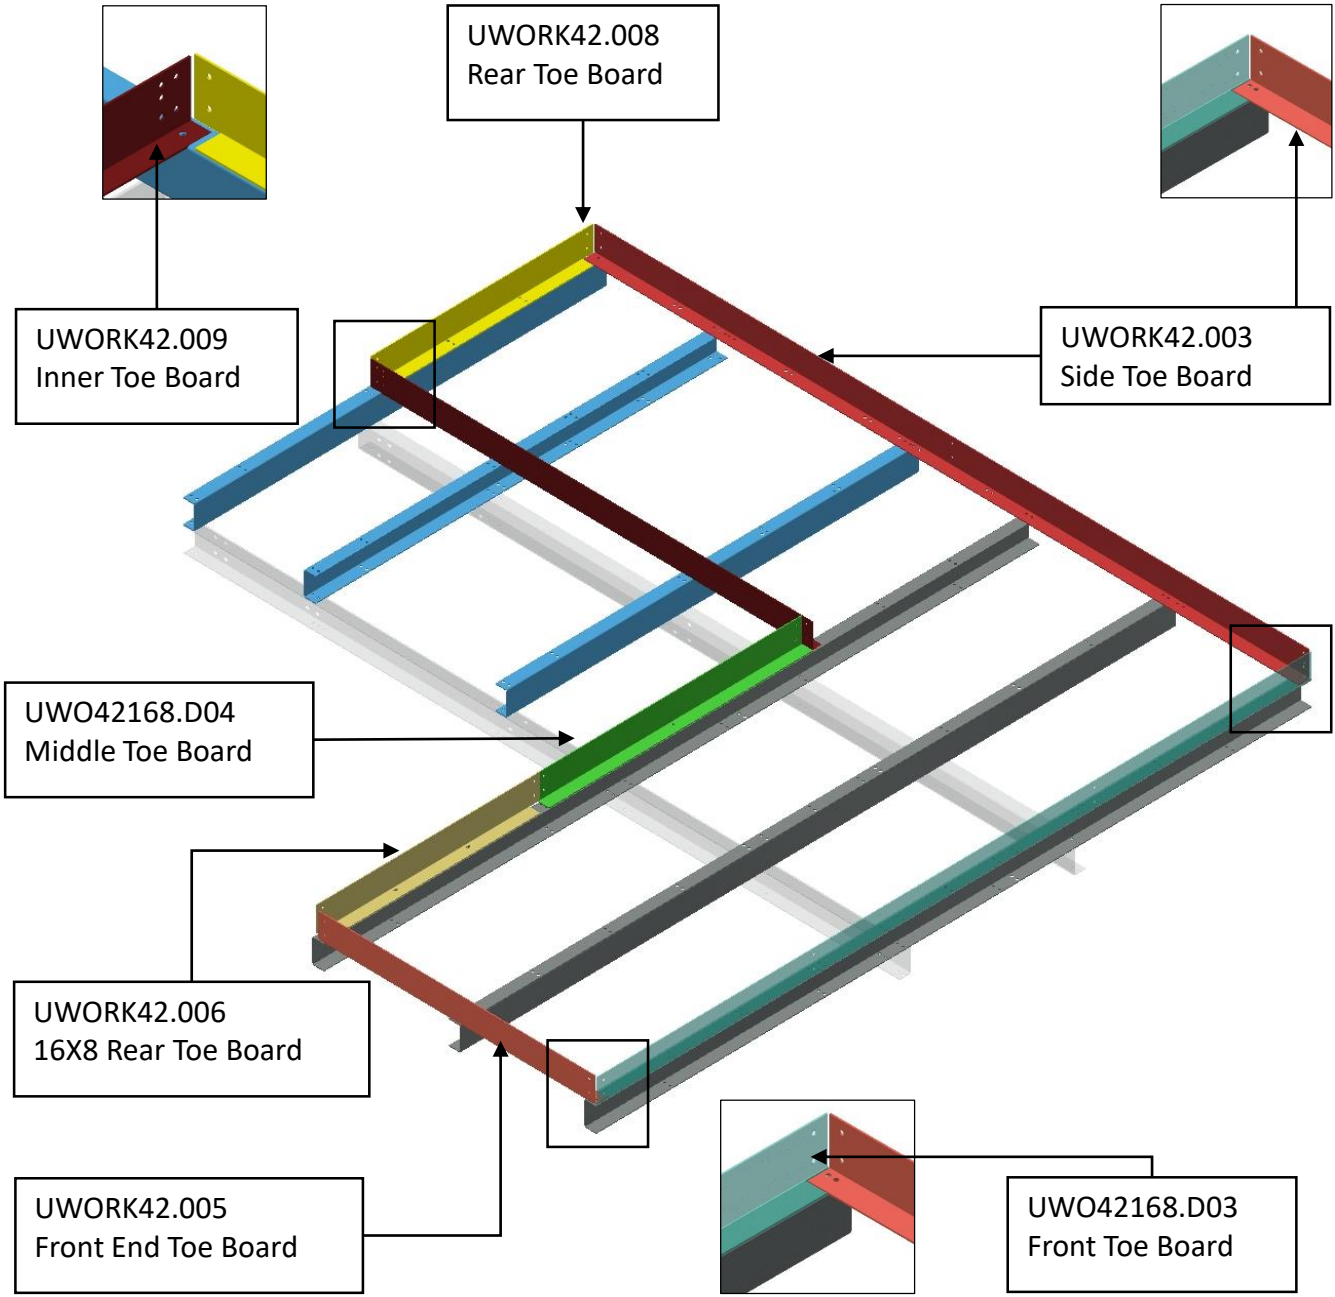


Fig. 2

### Step-3

- Install decking planks and fasten them to the channels as shown below.
- Use 5/16" x 3/4" Bolt and Nut

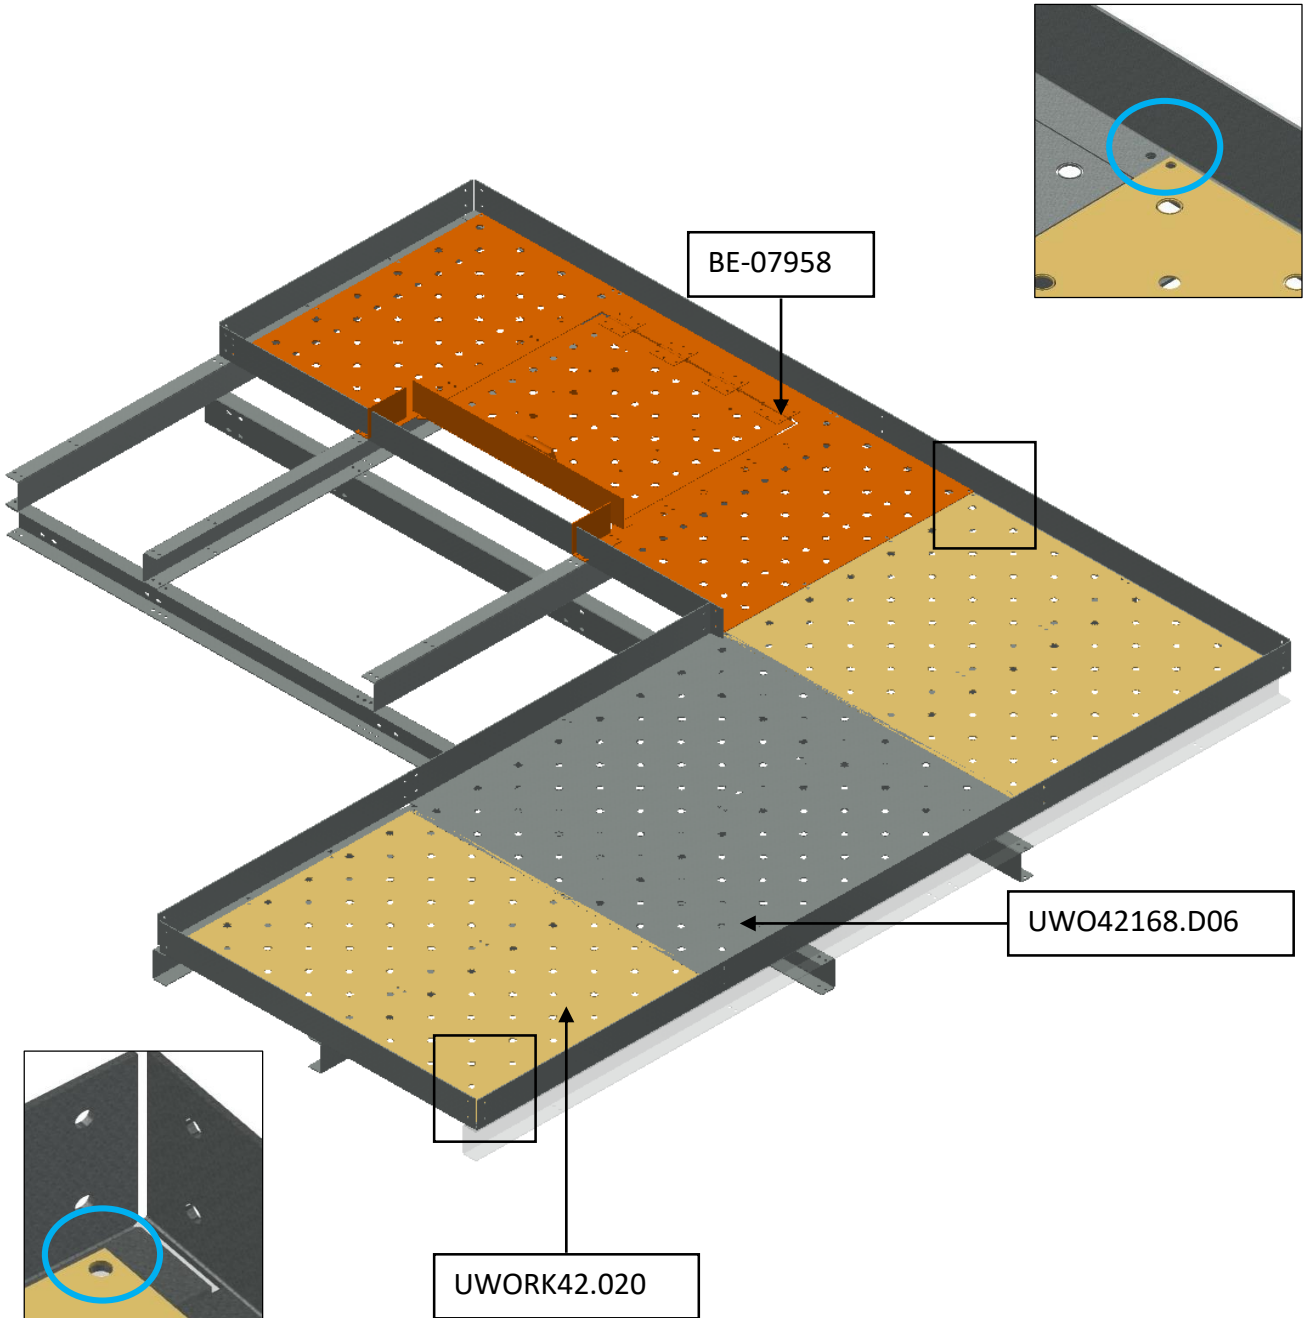


Fig. 3

### Step-4

- Install the handrail post around the perimeter channels as shown
- Use 5/16" x 3/4" Bolt and Nuts


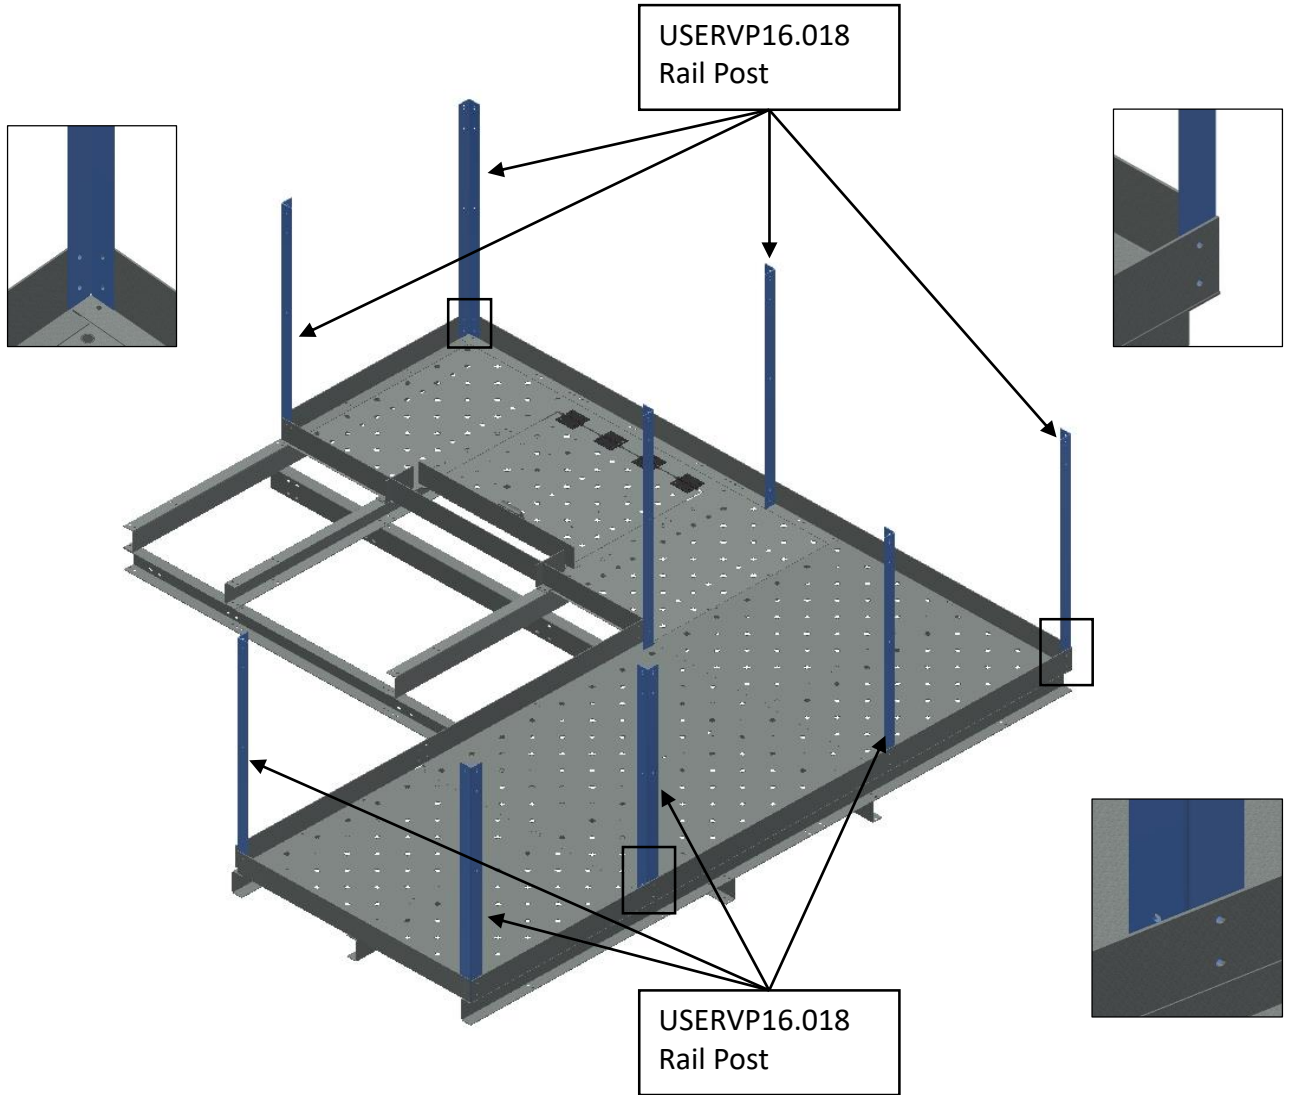


Fig. 4

### Step-5

- Install the handrails to the posts as shown
- Use 5/16" x 3/4" Bolt and Nuts

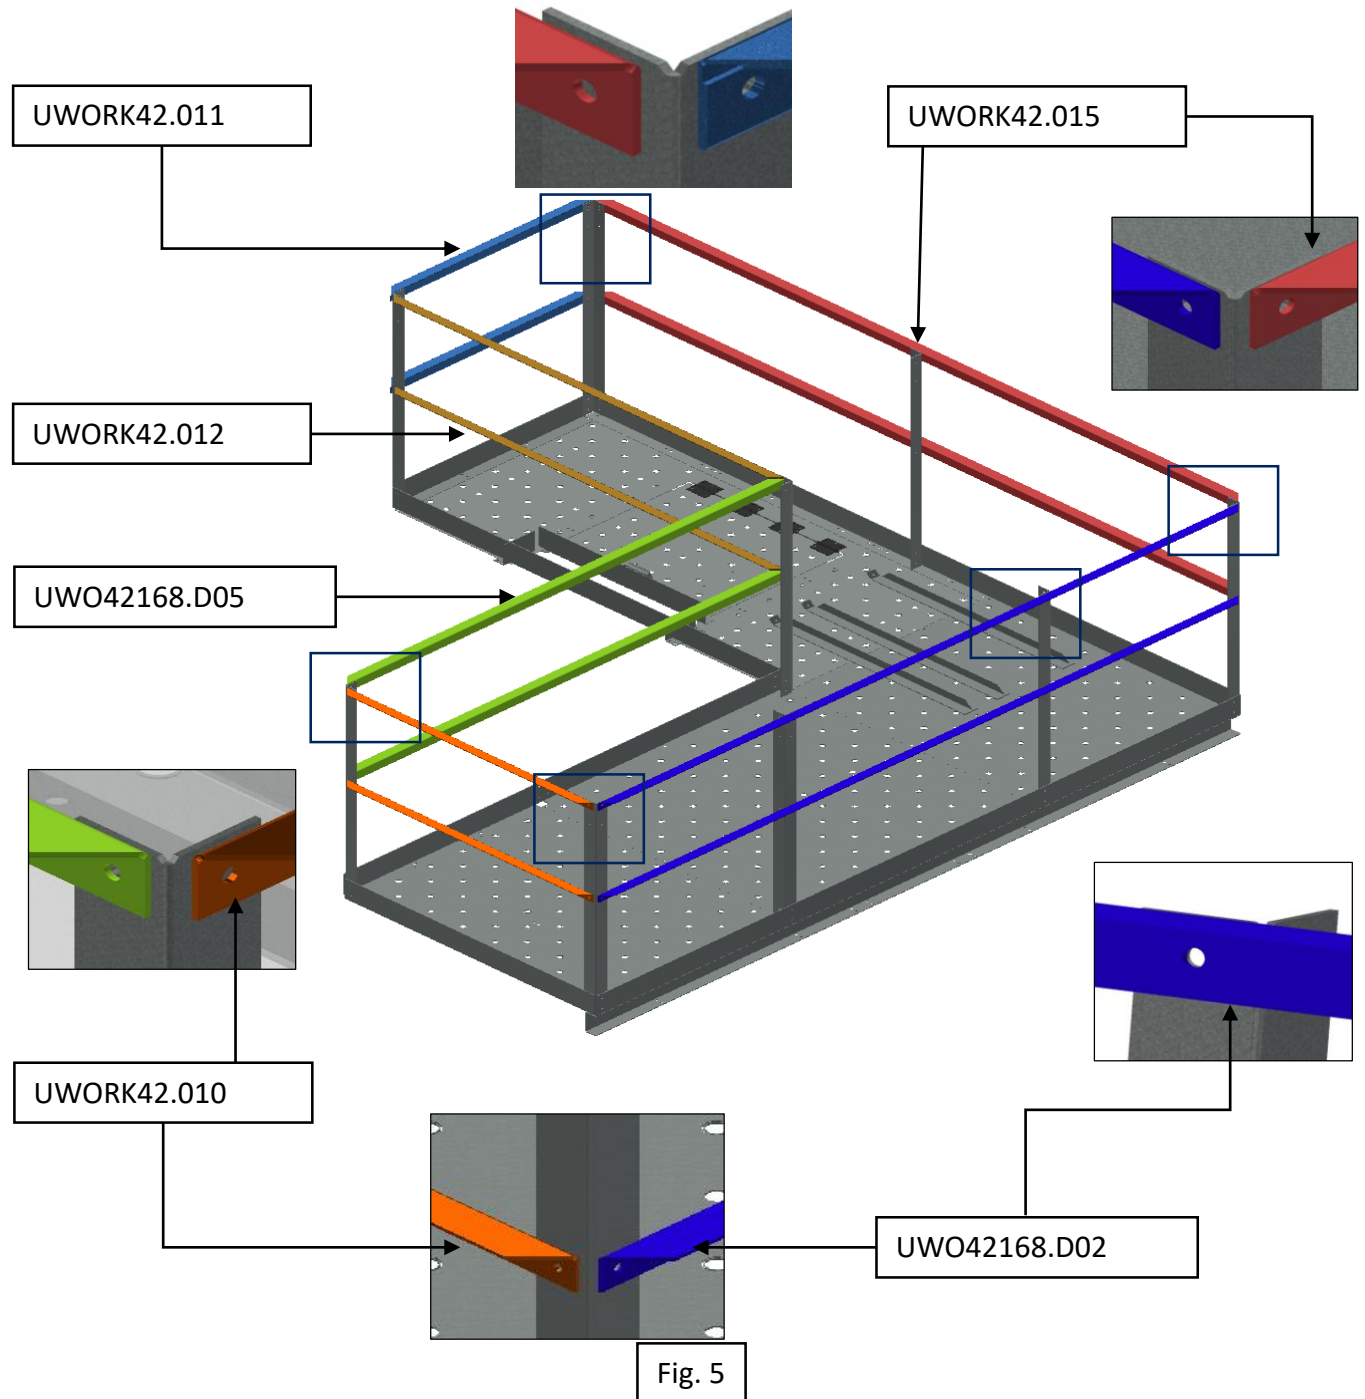

### Step-6

- Install the kick braces on the Floor Panels as shown.

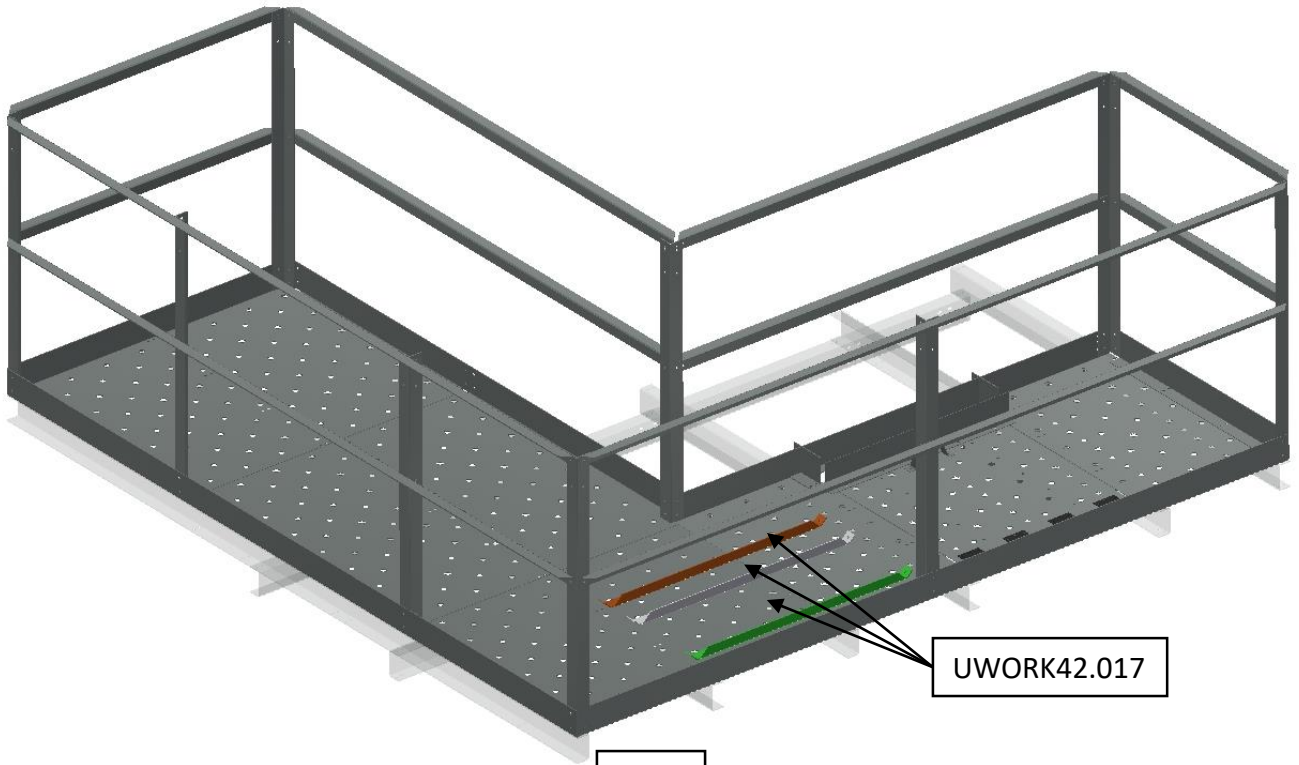


Fig. 3



Assembly- GLA-LWPLAT-20X8